




# SCORPION WORX® HEADSET HANGER


## CAN-AM X3

**REQUIRED TOOLS:** 5/32 ALLEN WRENCH  
10MM WRENCH


**SIDE VIEW OF UPPER CAGE  
(FRONT SEAT)**

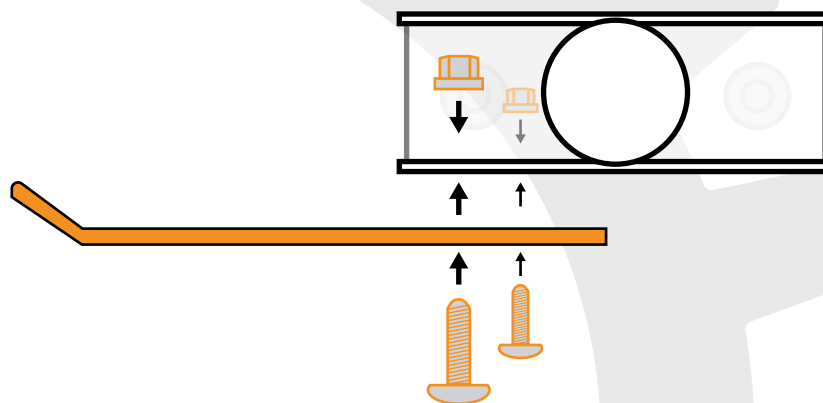

# SIDE VIEW OF UPPER CAGE (REAR SEAT)

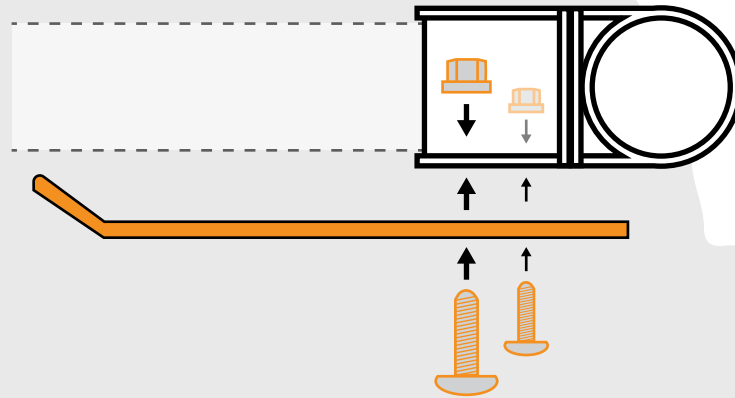

# VIEW FROM INSIDE OF MACHINE

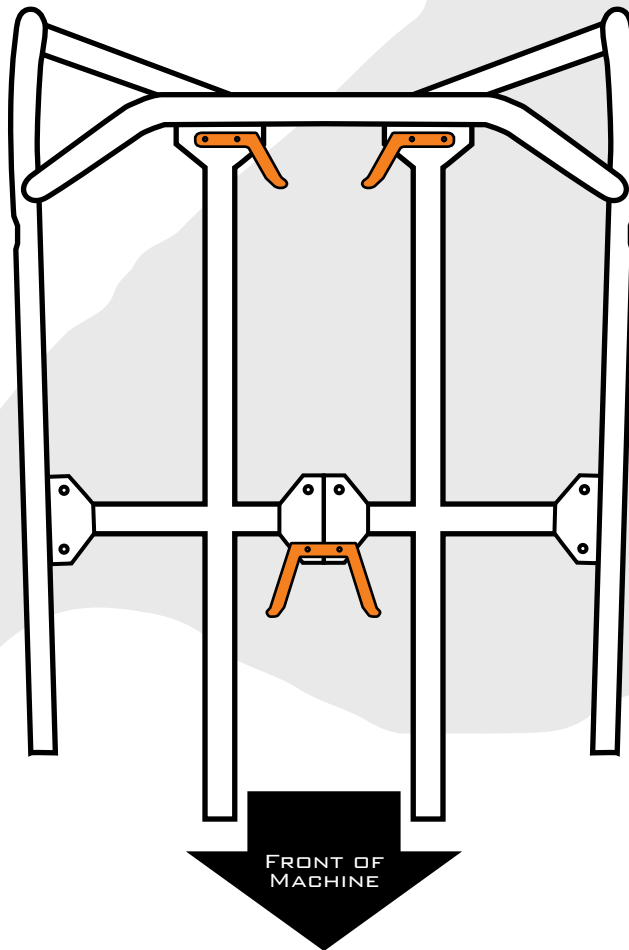

FOR QUESTIONS AND ADDITIONAL INFORMATION VISIT US ON-LINE TODAY.

[WWW.SCORPIONWORX.COM](http://WWW.SCORPIONWORX.COM)

© 2020 SCORPION WORX. ALL RIGHTS RESERVED.